2.Exploded Views and Parts List

2-1 Cassette Deck :ADR268FTW1

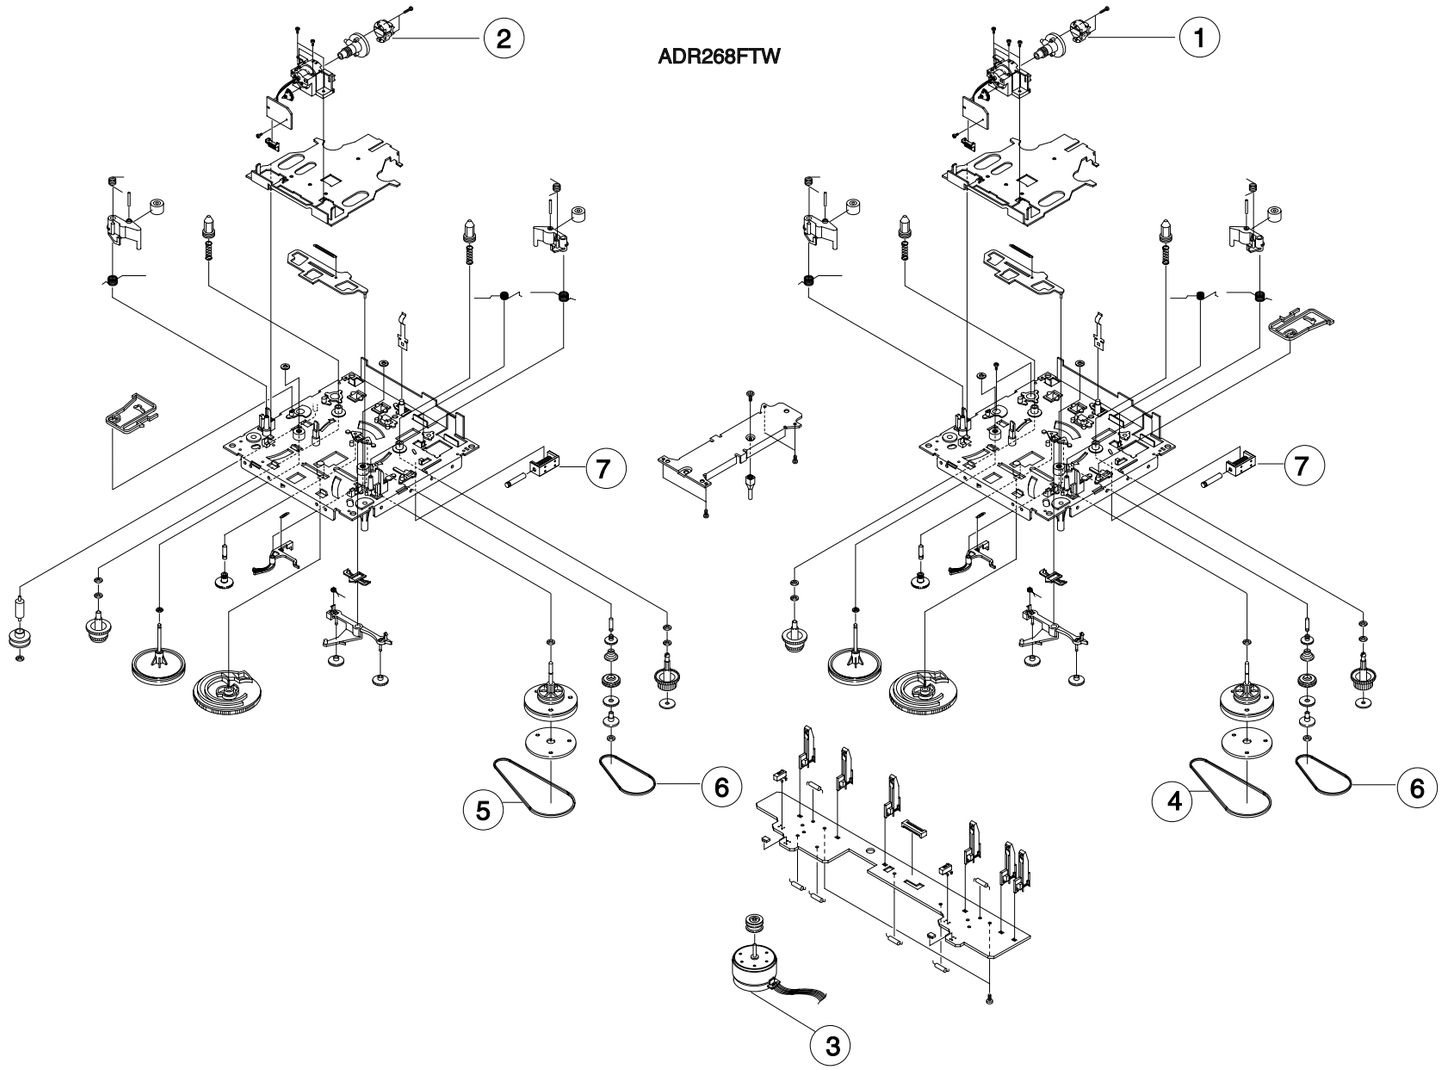

No.	Code No.	Description	Specification	Remarks
	AH59-01146A	DECK-CASSETTE	ADR268FTW1	
1	AH81-01030A	ASSY R/P HEAD	TR56R-AA2N1	MT91-11012W
2	AH81-01033A	ASSY P/B HEAD	DZK10P-122N3	MT91-11013C
3	AH81-00422A	ASSY MOTOR	ADR246DSW	MT91-15013Y
4	AH81-00364A	BELT MAIN1	ADR246DSW	6602-001056
5	AH81-00365A	BELT MAIN2	ADR246FTW	6602-001010
6	AH81-00101A	BELT SUB	34.1*1.1*1.1	6602-001055
7	AH81-00102A	SOLENOID	DAT-05A1	MT75-00049A

2-2 Total Exploded View and Parts List

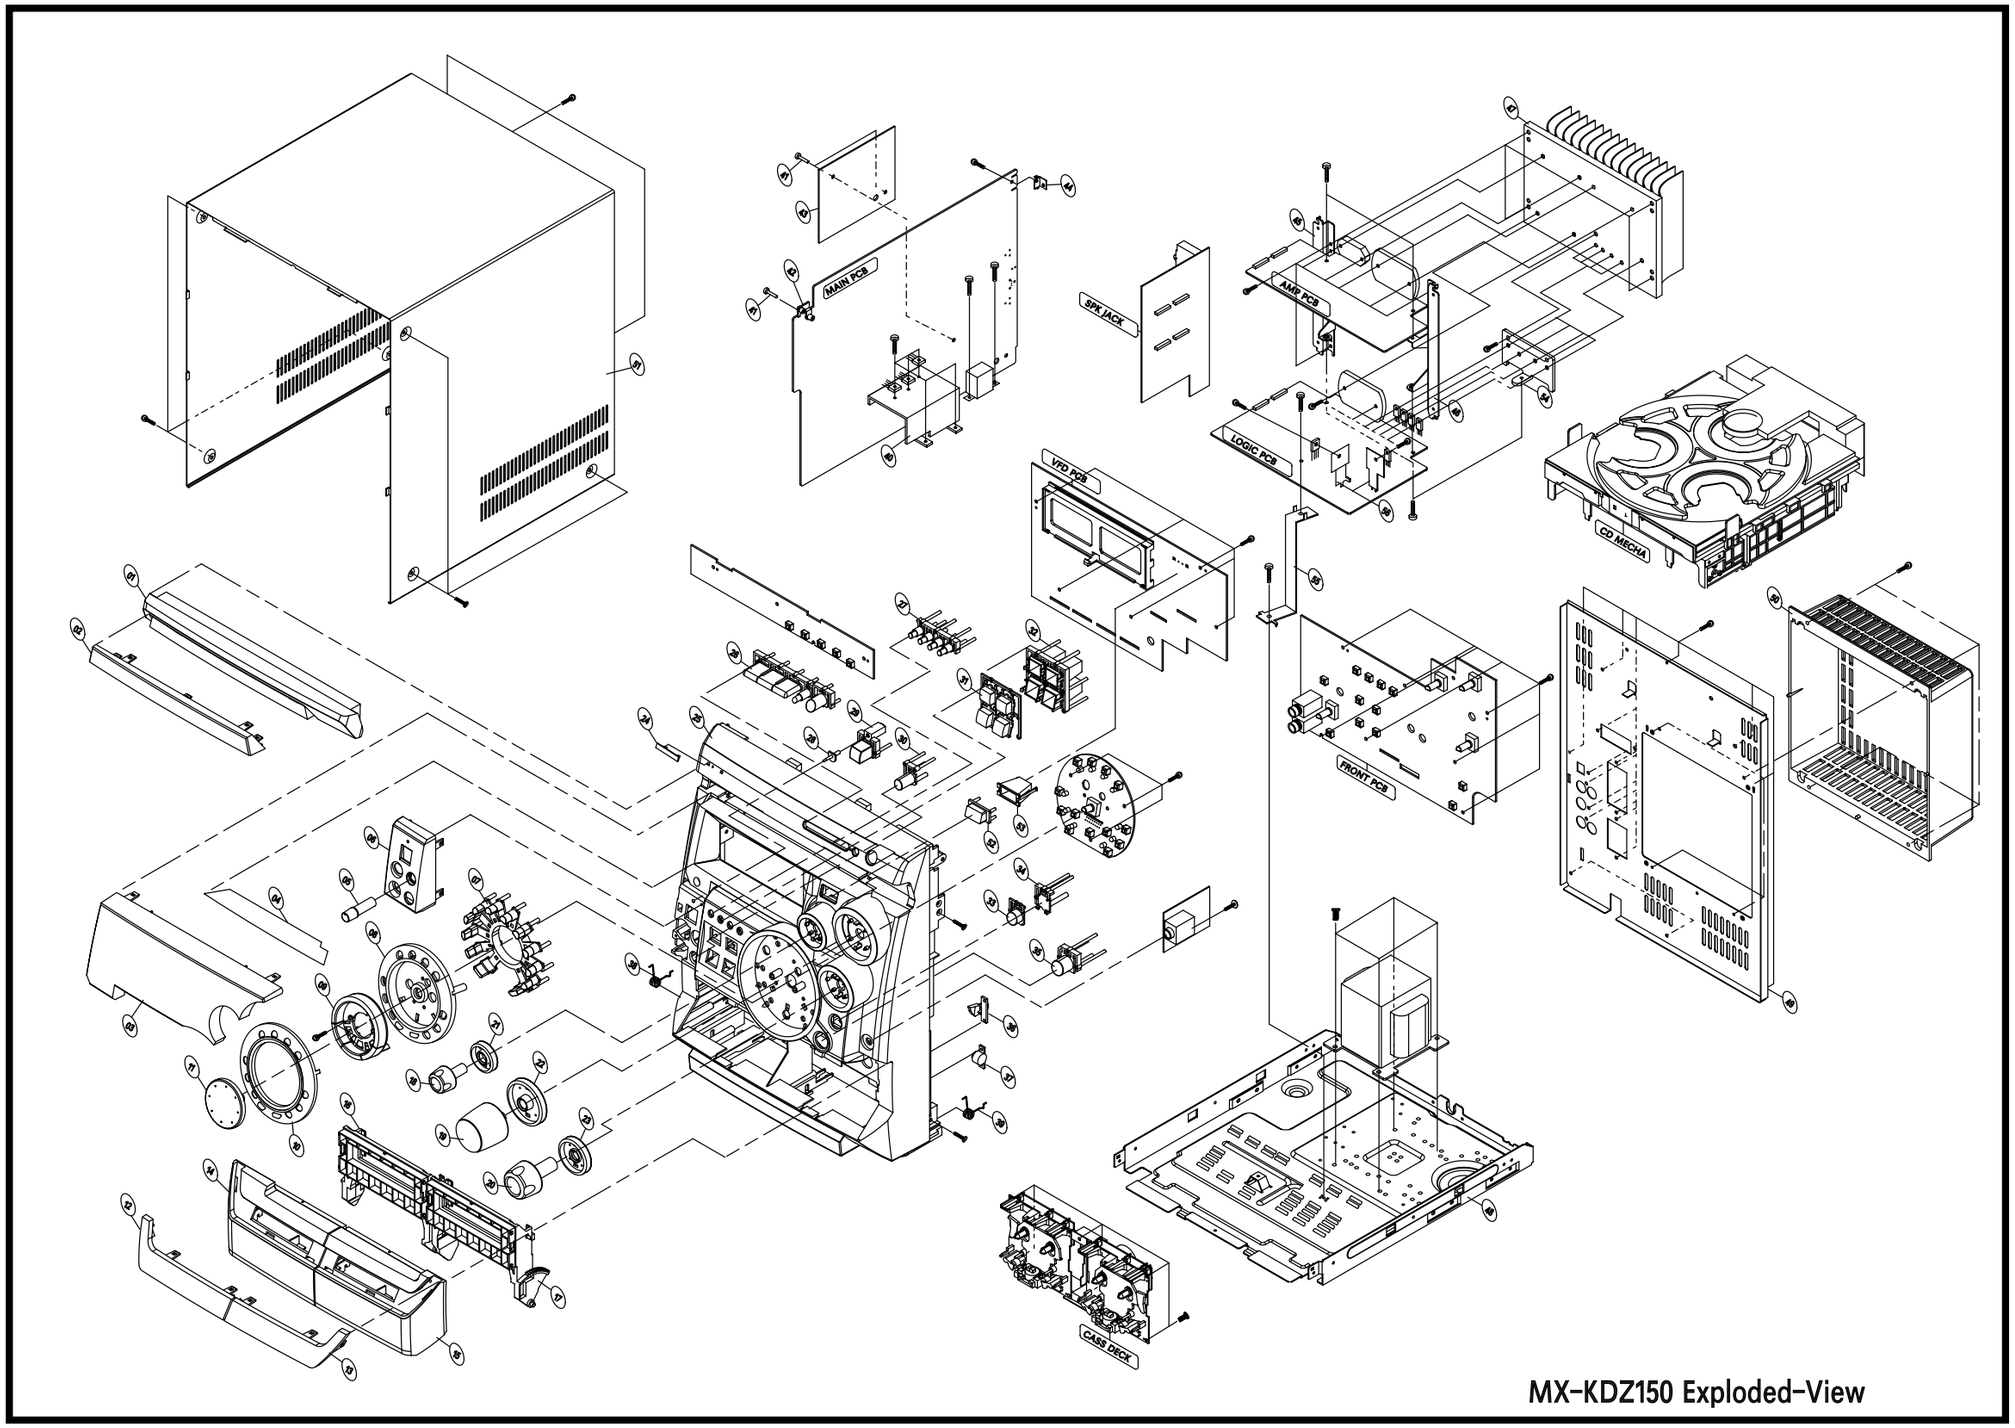

MX-KDZ150 Exploded-View

*** Parts List of Total Exploded view**

No.	Code No.	Description	Specification	Q'ty	Remark
1	AH64-01704B	DOOR-CD	ABS L/GRAY	1	MAX-KDZ150
2	AH64-01749T	WINDOW-DOOR CD	PMMA VIOLET	1	MAX-KDZ150
3	AH64-01705F	WINDOW-VFD	PMMA VIOLET	1	MAX-KDZ150
4	AH63-00395A	SHEET-VFD	PC 0.4T	1	
5	AH64-01715B	KNOB-MIC	ABS L/GRAY	1	MAX-KDZ150
6	AH61-00964F	CAP-MIC.D	ABS L/GRAY	1	MAX-KDZ150
7	AH64-02342B	KNOB-KARAOKE	ABS CLEAR 1Kg+5g	1	
8	AH63-00524A	COVER-KARAOKE	ABS L/GRAY	1	
9	AH64-01718G	KNOB-STOP	ABS L/GRAY	1	MAX-KDZ150
10	AH67-00215E	CAP-KARAOKE	AL 0.8T	1	MAX-KDZ150
11	AH64-01710B	KNOB-JOG	ABS L/GRAY	1	MAX-KDZ150
12	AH64-01706B	WINDOW-DOOR.A	PMMA VIOLET	1	
13	AH64-01707B	WINDOW-DOOR.B	PMMA VIOLET	1	
14	AH64-01701C	DOOR-CASS.A	ABS L/GRAY	1	MAX-KDZ150
15	AH64-01702B	DOOR-CASS.B	ABS L/GRAY	1	MAX-KDZ150
16	AH61-01011A	HOLDER-DOOR.A	ABS L/GRAY	1	MAX-KDZ150
17	AH61-01012A	HOLDER-DOOR.B	ABS L/GRAY	1	MAX-KDZ150
18	AH64-01716B	KNOB-SOUND	ABS L/GRAY	1	MAX-KDZ150
19	AH64-01711B	KNOB-VOLUME	ABS L/GRAY	1	MAX-KDZ150
20	AH64-01717B	KNOB-SUBWOOFER	ABS L/GRAY	1	MAX-KDZ150
21	AH67-00157B	LENS-SOUND	PMMA BLUE	1	
22	AH67-00156B	LENS-VOLUME	PMMA BLUE	1	
23	AH67-00160B	LENS-SUBWOOFER	PMMA BLUE	1	
24	AH64-70003K	BADGE-BRAND	ABS BLK	1	
25	AH64-01700M	CABINET-FRONT	MIPS D/GRAY	1	MAX-KDZ150
26	AH64-01709B	KNOB-OPEN	ABS L/GRAY	1	MAX-KDZ150
27	AH64-01714B	KNOB-DEMO	ABS L/GRAY	1	MAX-KDZ150
28	AH67-00159A	LENS-STANDBY	PMMA CLEAR	1	
29	AH64-01708E	KNOB-POWER	ABS L/GRAY	1	MAX-KDZ150
30	AH64-01719B	KNOB-ECHO	ABS L/GRAY	1	MAX-KDZ150
31	AH67-00154D	LENS-FUNCTION	PMMA BLUE 1Kg+1g	1	
32	AH61-00967A	HOLDER-FUNCTION	ABS WHT	1	
33	AH67-00158C	LENS-DVD	PMMA MILKY	1	
34	AH61-00966A	HOLDER-DVD	ABS WHT	1	
35	AH67-00155B	LENS-P.SOUND	PMMA ORANGE	1	
36	AH61-00970A	HOLDER-P.SOUND	ABS WHT	1	

No.	Code No.	Description	Specification	Q'ty	REMARK
37	AH64-01712B	KNOB-ENTER	ABS L/GRAY	1	MAX-KDZ150
38	AH95-50001A	LATCH-ASS'Y	POM	2	
39	AH61-80030A	DAMPER-ASS'Y	POM	2	
40	AH61-00522A	SPRING-EJECT.A	STS	1	
41	AH61-00523A	SPRING-EJECT.B	STS	1	
42	AH61-00414A	SUPPORT-RIVET	POM	3	
43	AH61-00021A	SUPPORT-PCB	ABS BLK	1	
44	AH63-00278A	COVER-PCB	EVA	1	
45	AH61-00685A	BRACKET-PCB	SECC 0.8T	1	
46	AH62-00044A	HEAT-SINK IC	AL	1	
47	AH61-00973A	BRKT-H/SINK.L	SECC 1.0T	1	
48	AH61-00977A	BRKT-H/SINK.R	SECC 1.0T	1	
49	AH62-00063M	HEAT-SINK MAIN	AL	1	
50	AH64-30416E	CABINET-BOTTOM	SECC 1.0T	1	
51	AH64-01703S	CABINET-REAR	SECC 0.8T	1	MAX-KDZ150
52	AH61-01409A	COVER-REAR	ABS L/GRAY	1	
53	AH64-00616D	CABINET-TOP	PCM 0.625T	1	MAX-KDZ150
54	AH61-00106A	HEAT-SINK.TR	AL2.0T	1	
55	AH61-00685B	BRACKET-PCB	SECC 0.8T	1	MAX-KDZ150
56	AH62-30127B	HEAT-SINK.IC	AL	2	MAX-KDZ150
A	6003-000276	SCREW-TAPTITE	BH 3*10 YEL	73	
B	6002-000126	SCREW-TAPTITE	FH 3*10 BLK	2	
C	AH60-00025A	SCREW-TAPTITE	BH 3*10 SIL	9	MAX-KD110/KD120
	6003-000275	SCREW-TAPTITE	BH 3*10 BLK	9	MAX-KD100
D	6002-000398	SCREW-TAPTITE	BH 3*6 YEL	5	
E	6003-001463	SCREW-TAPTITE	TH 4*6 YEL	4	
F	6003-001474	SCREW-TAPTITE	BH 3*30 YEL	2	
G	6003-001465	SCREW-TAPTITE	BWH 3*8 YEL(•'12)	1	
H	6003-000278	SCREW-TAPTITE	BH 3*14 YEL	2	

2-3 DVD Changer Mecha Exploded View and Parts list

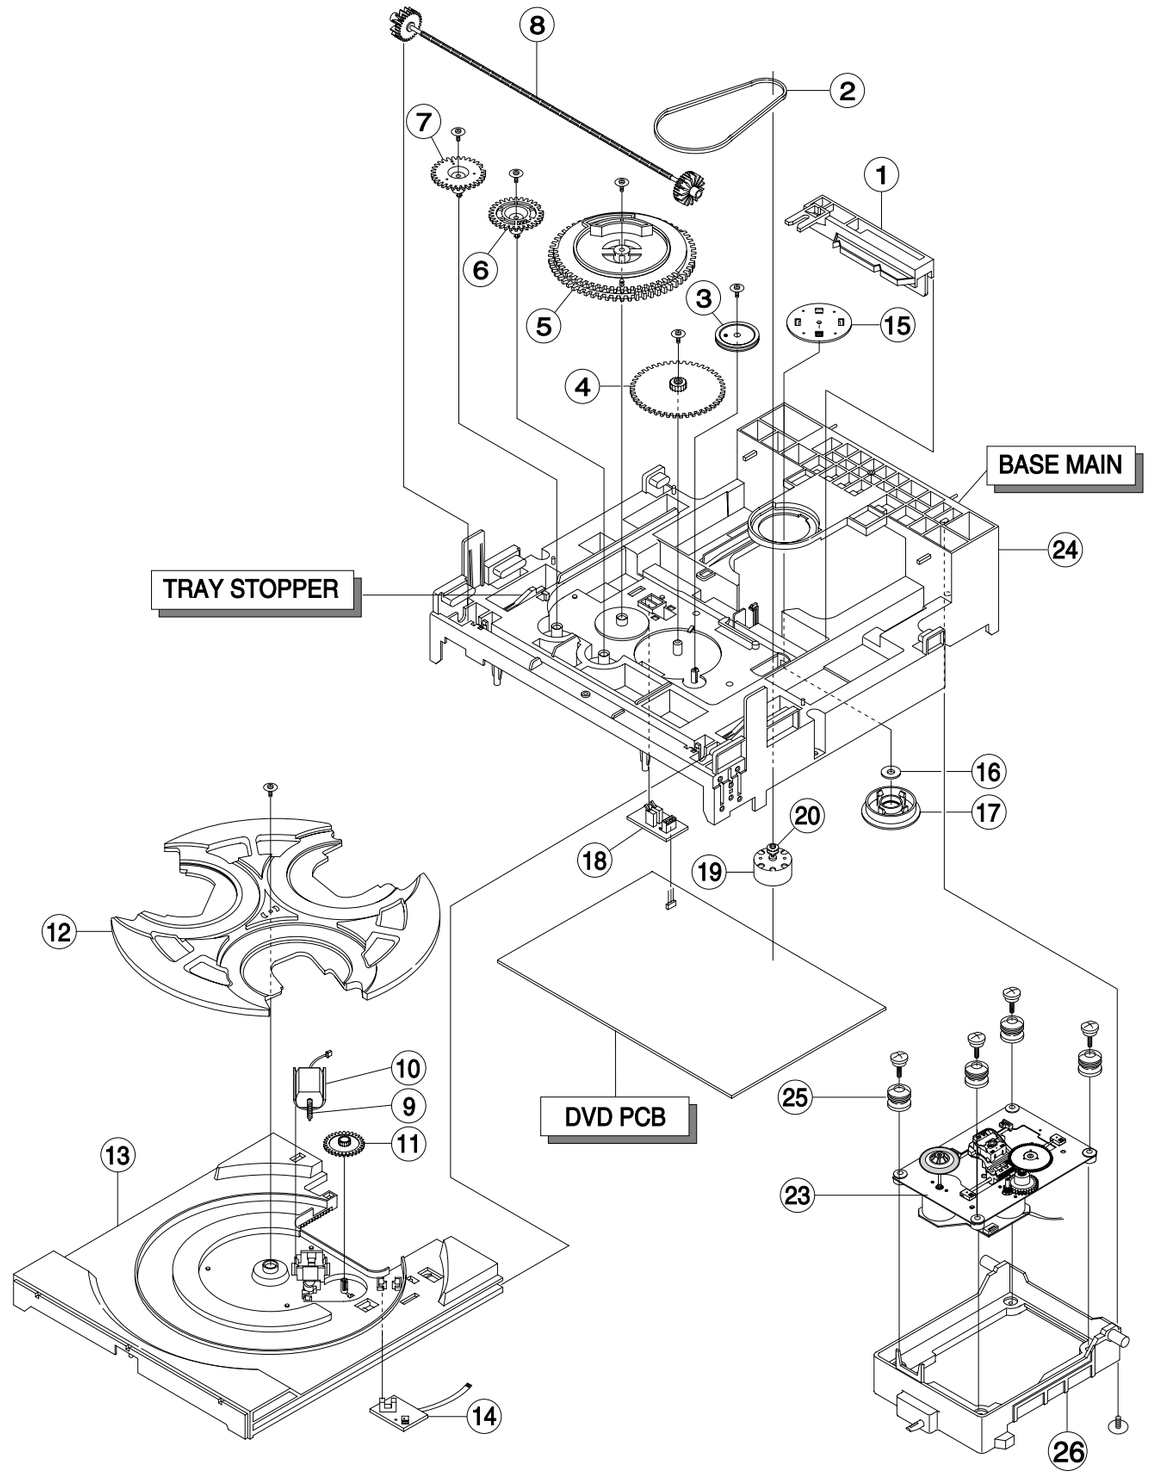

No.	Code No.	Description	Specification	Remarks
1	AH66-80022A	SLIDE-CAM	ABS NATURAL	
2	AH66-60034A	BELT-LOAD	CR BLK T1.5	
3	AH66-20186A	GEAR-PULLEY	POM WHT	
4	AH66-20187A	GEAR-LOAD	POM	
5	AH66-20188B	GEAR-CAM	POM WHT	
6	AH66-20189B	GEAR-TRAY	POM BLK	
7	AH66-20190B	GEAR-CONVERT	POM WHT	
8	AH66-20191A	GEAR-SYNCHRO	ABS NATURAL	
9	AH66-20192A	GEAR-WORM	POMWHT	
10	AH31-12001A	MOTOR-LOADING	FF-030PN	
11	AH66-20193A	GEAR-ROULETTE	TPE BLK	
12	AH63-00324A	TRAY-ROULETTE	ABS BLK	
13	AH63-00325A	TRAY-DISC	ABS BLK	
14	AH41-10456A	PCB-SENSOR	PENOL T1.6	
15	AH66-00164B	CLAMPER-UPPER	POM WHT	
16	AH61-00747A	BRKT-CHUCK	SECC T1.0	
17	AH66-00165A	CLAMPER-LOWER	POM WHT	
18	AH41-10455A	PCB-SW	PENOL T1.6	
19	AH31-10021A	MOTOR-DC	RF500TB-12560	
20	AH66-10008A	PULLEY-MOTOR	POM BLK	
23	AH59-00130A	DECK	CMS-S21MG6U	
24	AH61-00837A	BASE-MAIN	ABS NATURAL	
25	AH73-00025B	RUBBER-CD	BUTYL	
26	AH66-00168A	LEVER-LIFT	ABS+G/F	

2-4-1 Front Speaker

* CAUTION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to damage the SPEAKER.

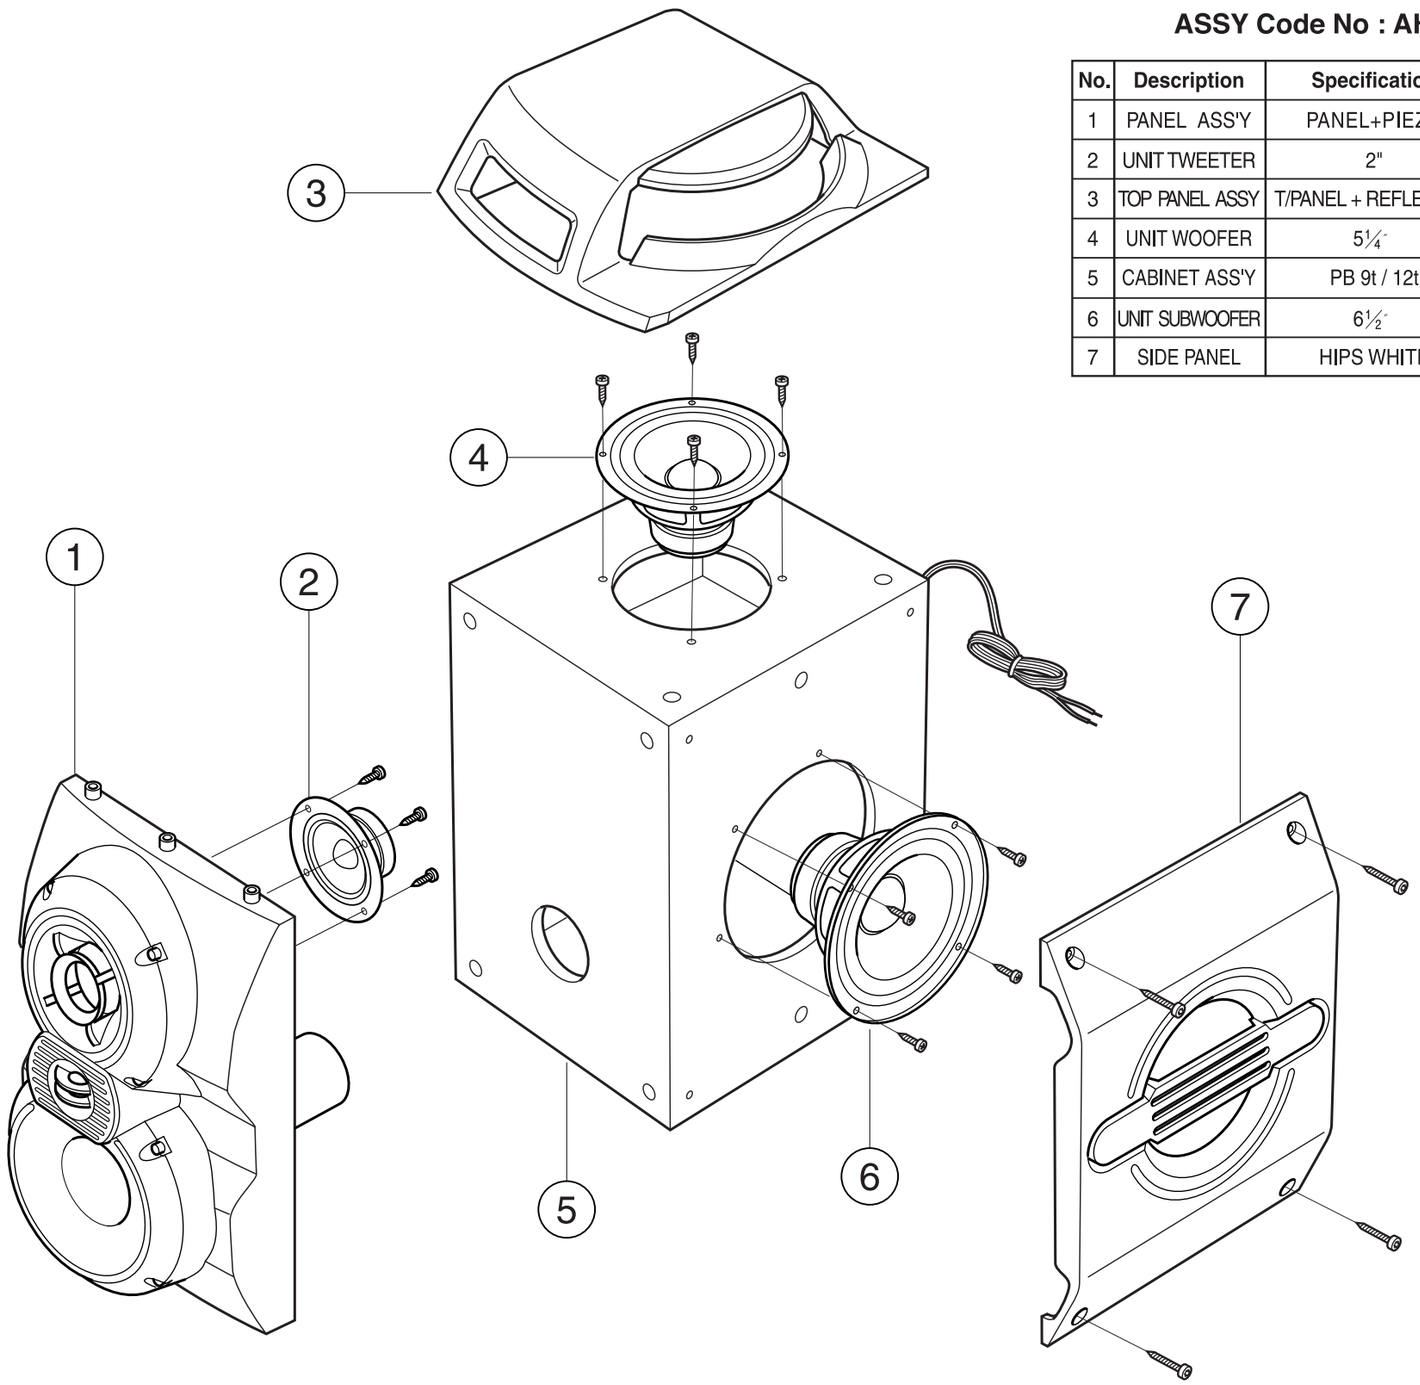

ASSY Code No : AH81-00643A

No.	Description	Specification	Code No.	Q'TY
1	PANEL ASS'Y	PANEL+PIEZO	AH81-00643P	1
2	UNIT TWEETER	2"	AH81-00643L	1
3	TOP PANEL ASSY	T/PANEL + REFLECTOR	AH81-00643Q	1
4	UNIT WOOFER	5¼"	AH81-00643K	1
5	CABINET ASS'Y	PB 9t / 12t	AH81-00643R	1
6	UNIT SUBWOOFER	6½"	AH81-00643J	1
7	SIDE PANEL	HIPS WHITE	AH81-00643H	1

2-4-2 Center Speaker & Rear Speaker

* CAUTION : It is used the bonding, connet NET FRAME(or FRONT PANEL ASS'Y) to CABINET ASS'Y.
So when the disassembly, take extreme care not to damage the SPEAKER.

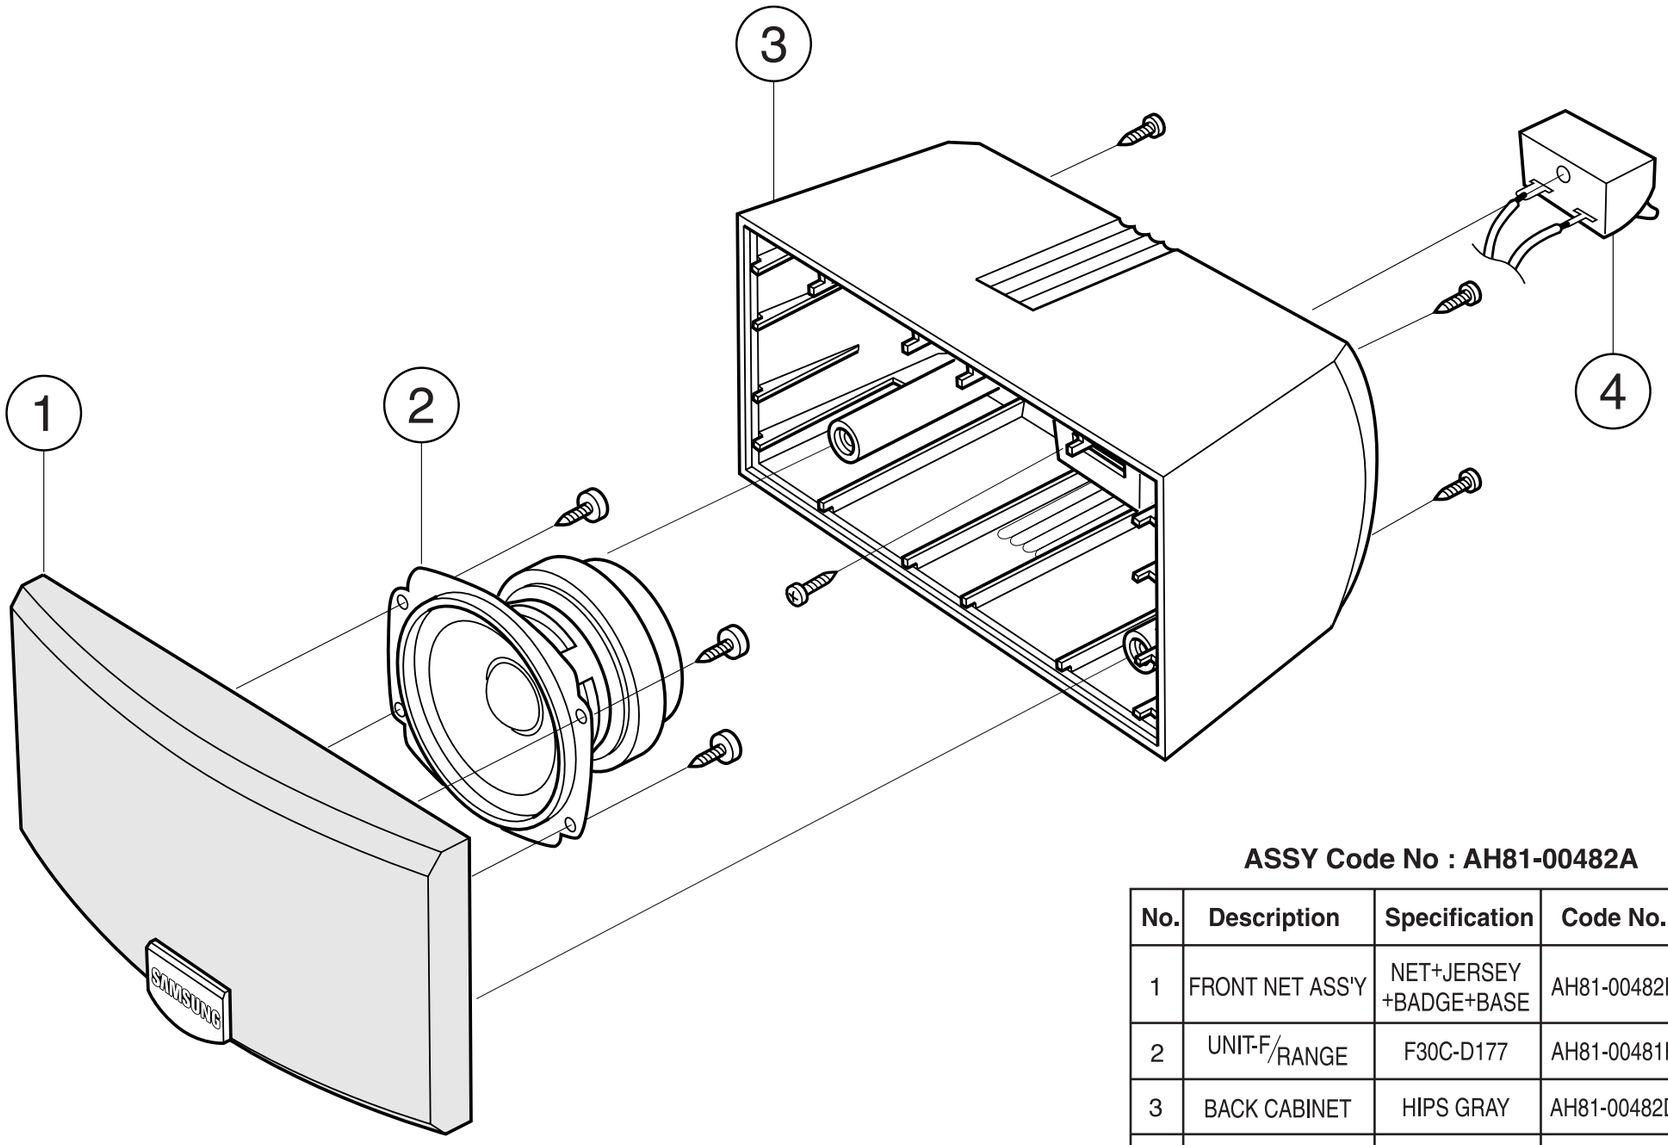

ASSY Code No : AH81-00482A

No.	Description	Specification	Code No.	Q'TY
1	FRONT NET ASS'Y	NET+JERSEY +BADGE+BASE	AH81-00482F	1
2	UNIT-F/RANGE	F30C-D177	AH81-00481F	1
3	BACK CABINET	HIPS GRAY	AH81-00482D	1
4	TERMINAL	PUSH 2P	AH81-00481G	1